■ Checklist and Installation

G (x1)

 
Socket Head Screw

 
Power Cable

 
Hex Head Screw

Anti-Vibration Pad

Please check all of the components shown in the component checklist. If any of the components are missing or damaged, contact your point of purchase for a replacement.








AC Adapter Adapter Holder Controller




Hex Head Screw

Phillips Head Screw

 
Cable Clip



Power Plug

 




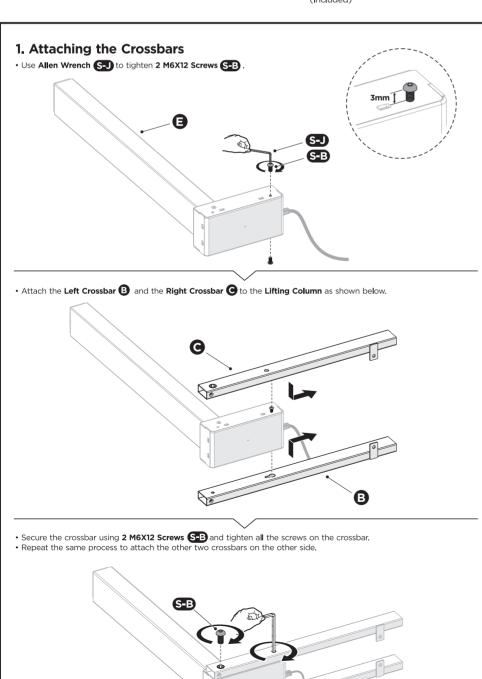

2. Attaching the Side Brackets

- Attach each Side Bracket to the Lifting Column using 2 M6x10 Screws S-A.
 Attach 6 Anti-Vibration Pads S-G to the crossbars and Side Bracket as shown below.
 Repeat the same process to attach the other side bracket.

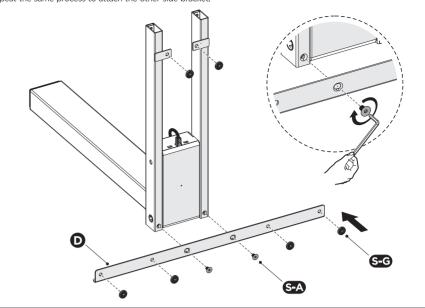


3. Attaching the AC Adapter

Phillips Head Screw


4mm Allen Wrench

ullet Insert the AC Adapter ullet to the Adapter Holder ullet , then hang the holder on the crossbar.

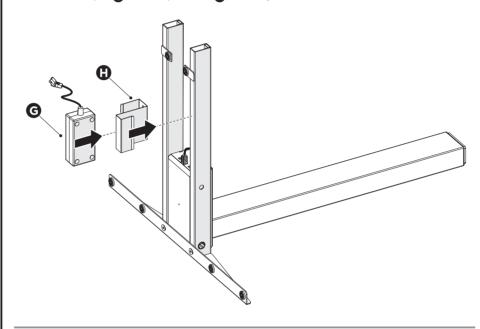


4. Attaching the Feet


- Attaching the Foot to the Lifting Column using 4 M6x35 Screws S-C.
- · Repeat the same process to attach the other foot

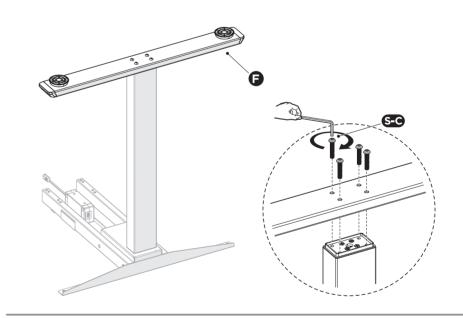

5. Adjusting the Frame and Attaching the Crossbar Rail

- Carefully place the desktop (not included) upside down on the blanket/floor.

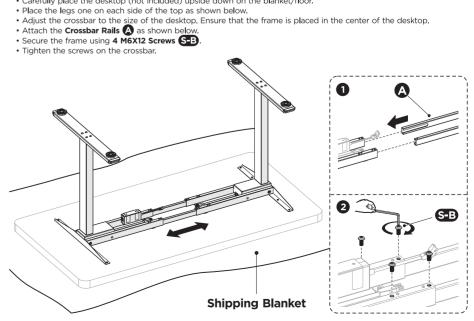


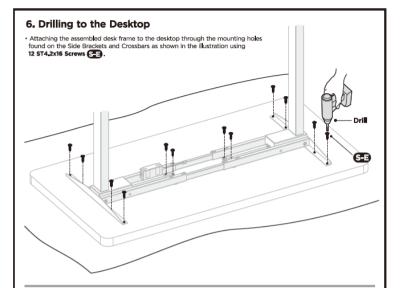


7. Connecting Cords

- Connect the Controller with 2 Lifting Columns. Use the Power Cable (for the Lifting Column on the far side.
- · Insert the Power Plug (into the AC Adapter.
- Mater


• Do not plug into the power before the desk is fully assembled.

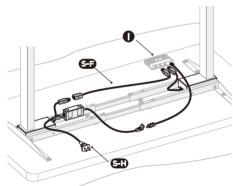

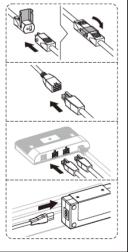


8. Attaching the Controller

 Attach the Controller to the desktop using 2 ST4.2x16 Screws C.D.

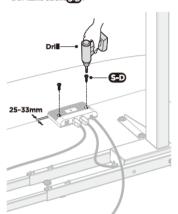

9. Cable Management

Run the cables through the Cable Clips and attach the Cable Clips to the desktop with ST4.2x16 Screws to ensure clean and neat surface.

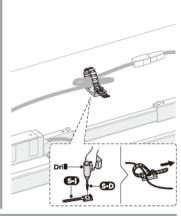

10. Adjusting the Desk

- · Turn over the desk with the help of another person.
- There are two adjustable foot pads under each foot. If the floor isn't even, simply turn the pad to adjust the level to make the desk stable.
- Tip: Use a bubble level (not included) to check if the desktop is even.
- · Using the desk for the first time, you will need to reset the system. Please refer to Digital Control Panel User Guide.

